


ARUM WALL LAMP TALL


ASSEMBLY MANUAL - 110171101 & 110170693

fermliving.com

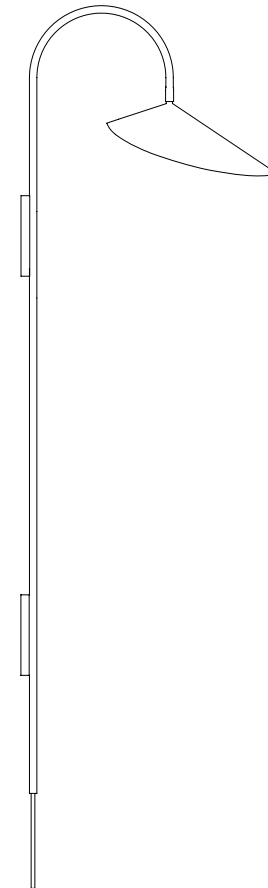


ferm
L I V I N G


CONTENT OF THE BOX

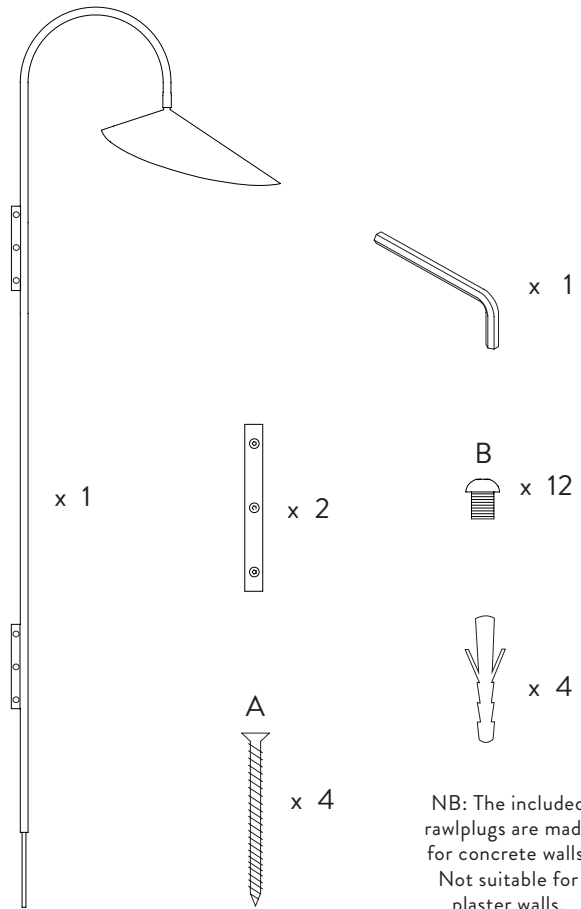

NB: The included rawlplugs are made for concrete walls. Not suitable for plaster walls.

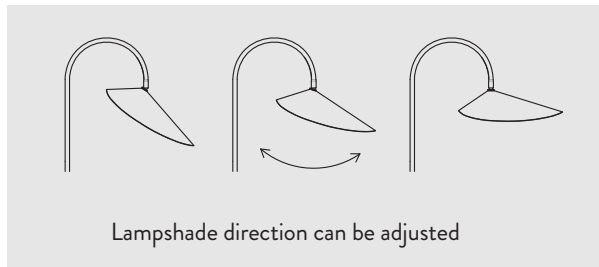

ASSEMBLY PROCESS

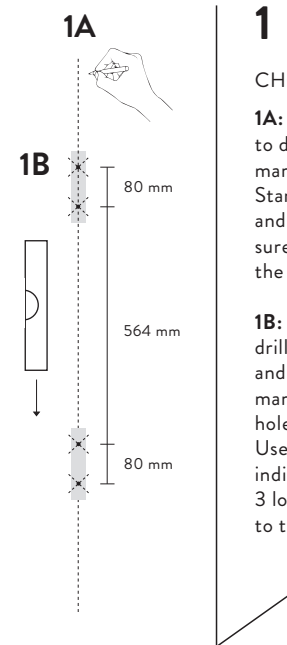


1

CHOOSE A POSITION

1A: At first; use a pencil to draw a vertical line to mark the preferred position. Start at the highest point and use a level to make sure the line is in level all the way down.


1B: Secondly; mark the drilling holes for the upper and lower base. Start by marking the highest placed hole (**1B**) for the upper base. Use the measurements indicated here to mark the 3 lower holes in reference to the highest hole.

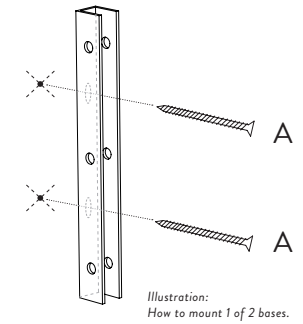

2

MOUNT UPPER + LOWER BASE


Start by drilling 4 holes in accordance to the pencil marks. Insert the 4 rawlplugs. Mount both the upper and lower base to the wall by using the 4 longer screws (A).

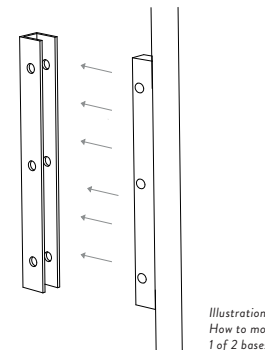

3

INSERT LAMP ON BASES

Slide the 2 boxes on the backside of the cylinder into the 2 bases.

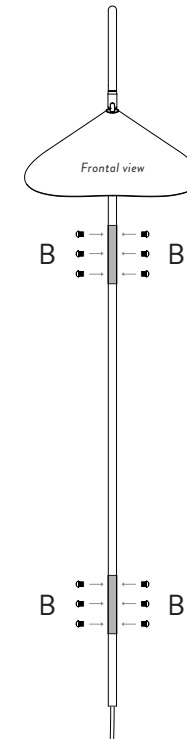

4

MOUNT LAMP TO BASE

Finally, mount the lamp by inserting the 2x6 shorter screws (B). 3 on each side of each base.

Start with the upper base and continue to the lower base.